



## Surface Mounted Installation (Optional)


- 5 Place the bracket on top of the luminaire.

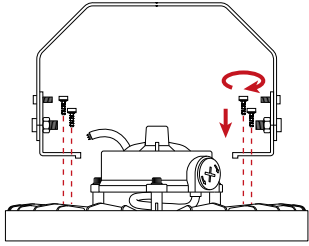


- 6 Screw the luminaire tightly into the ceiling.

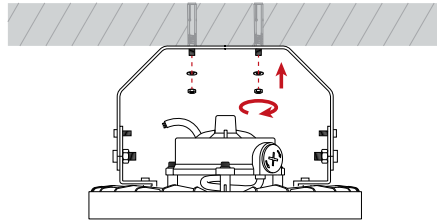

- 7 Adjust the lower bar to the desired angle, then tighten the screws to secure the fitting.


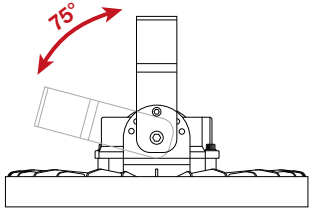


- 8 Plug the luminaire to the socket.

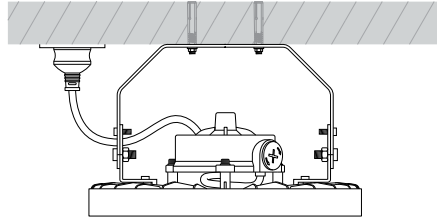

V1-09.24.2024 Product designs and technical data may be subject to change.

# Bayled TPU90150 IP65 Rated Highbay Installation Guide

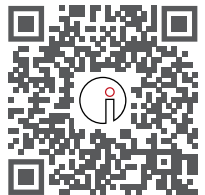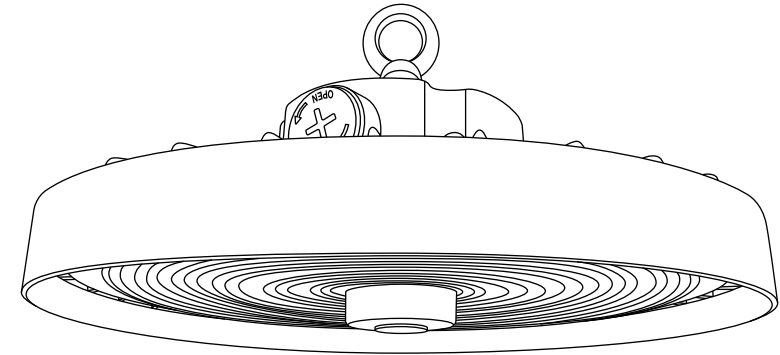

Scan to explore  
TPU90150 online

For warranty information, please visit  
trendlighting.com.au/warranty

### Important Safety Information

Please read these installation instructions carefully before installing this luminaire.

- This product must be installed by a licensed electrician in accordance with AS/NZS 3000 and local regulations.
- Isolate the mains power supply prior to installation.
- Only adjust the Wattage and CCT switch when luminaire is powered off.
- Only reconnect mains power after installation is completed.
- No part of the luminaire should be altered or modified.
- This product is not user serviceable.

### Installation Notes



Ingress Protection Impact Protection


### Product Code

TPU90150-TRI-B


### Dimensions

Ø280 x 142 (H) mm


- 1** Isolate the mains power supply prior to commencing installation.

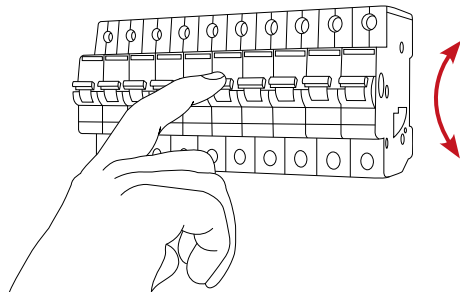


- 2** Ensure the luminaire is powered off. Open the switch cap (A) to adjust the power (B) and CCT (C).

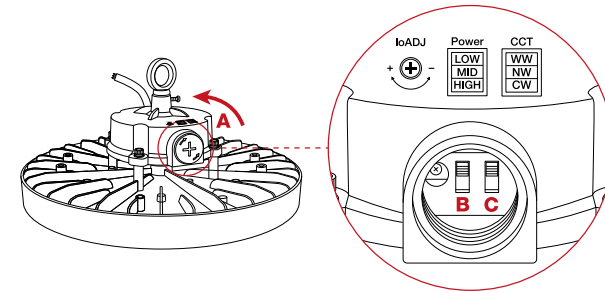

- 3** Unscrew the diffuser.

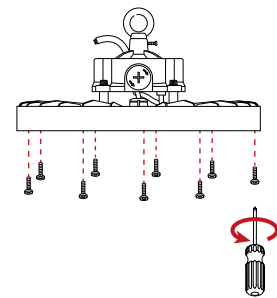


- 4** Rotate the diffuser to adjust the beam angle to 60°, 90° or 120°, then tighten the screws to secure the fitting.

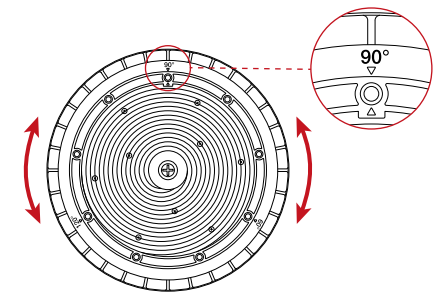

### Suspended Installation

- 5** Suspend the luminaire from a suitable mounting point.

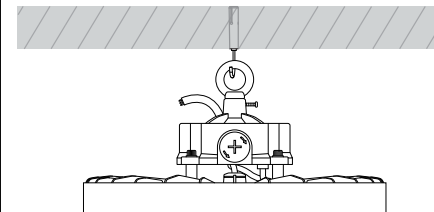

- 6** Plug the luminaire to the socket.

