




- 6** Connect the mains wiring to the terminal block on the rear of the LED tray. Protect the PCB from damage during the installation process.

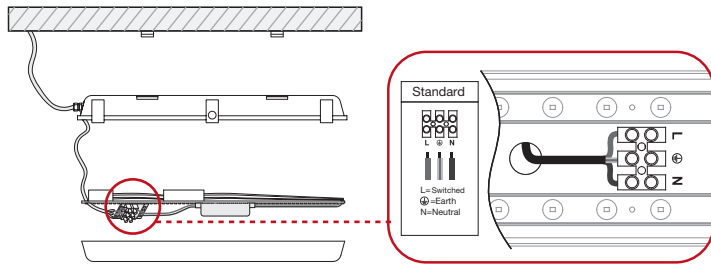


- 7** Secure the luminaire side tabs with screws.

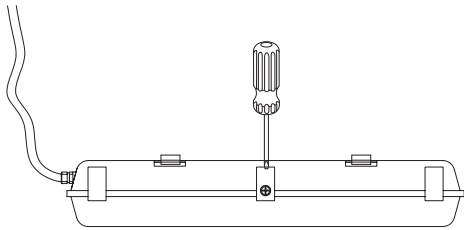

- 8a** For **Surface Mounted** installation, firmly attach the luminaire to the mounting brackets on the ceiling.




- 8b** For **Suspended** installation, attach the supplied suspension brackets to the ceiling. Connect the suspension cable to the luminaire. **Cable is not included.**

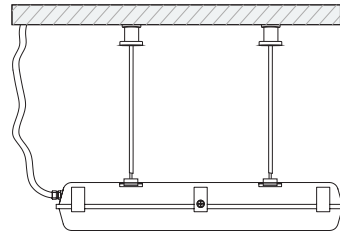

V2-20.07.2023 Product designs and technical data may be subject to change

Nero WP0601 IP65 & IK08 Rated Tricolour Weatherproof Batten *Installation Guide*

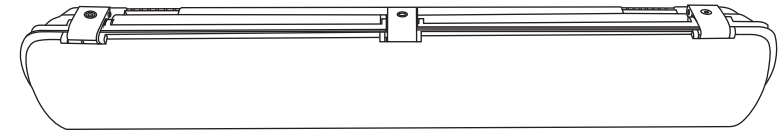

Scan to explore
WP0601 online

For warranty information please visit

trendlighting.com.au/warranty

Important Safety Information

Please read these installation instructions carefully before installing this luminaire.

- This product must be installed by a licensed electrician in accordance with AS/NZS 3000 and local regulations
- Isolate the mains power supply prior to installation
- Only adjust the CCT switch when luminaire is powered off
- Only reconnect mains power after installation is completed
- No part of the luminaire should be altered or modified
- This product is not user serviceable

Installation Notes



Ingress Protection Impact Protection

Product Code

WP0601-TRI-W-ND

Dimensions

615 (L) x 116 (W) x 74 (H) mm

