Surface Mounted Installation (Requires Optional Surface Mounting Kit)

1 Isolate the mains power supply prior to commencing installation.

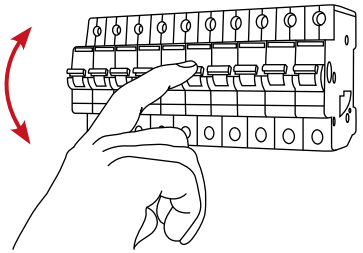

2 Assemble all four sides of the surface mounted frame with the screws provided. This will ensure that the frame remains square.

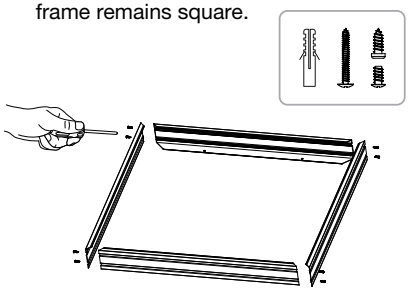

3 Install the surface mounted frame to the ceiling **(A)** with all four sides attached. Once installed, unscrew and remove one side of the frame **(B)**.

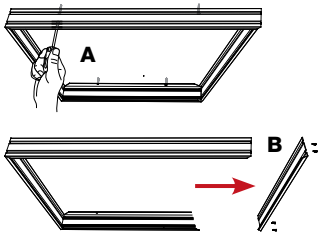

4 Connect LED panel light to the driver Connect the driver flex and plug to the socket.

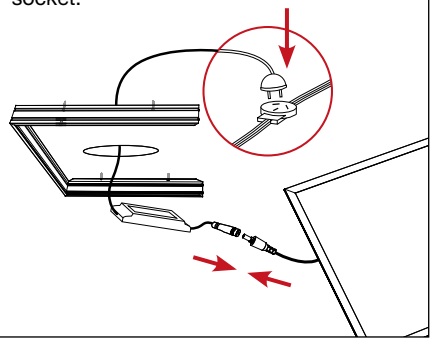

5 Slide the LED panel light with the driver into the surface mounted frame. Re-screw the removed side panel back to secure the panel.

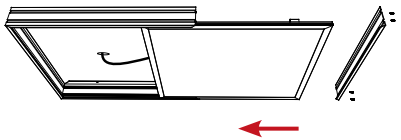

6 Restore power once installation has been completed.

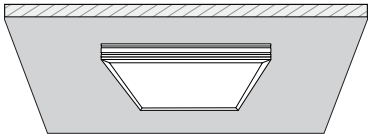

Trend Lighting Co. Pty Ltd

V1-03.06.2025 Product designs and technical data may be subject to change.

Panel ZPL40
Rectangular Panel Light
Installation Guide

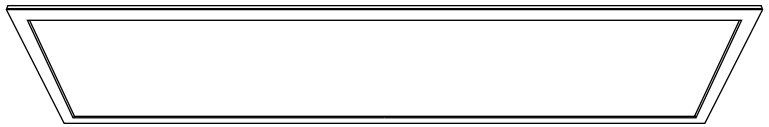

TREND
LIGHT BY SOLID STATE

Scan to explore ZPL40 online

trendlighting.com.au

For warranty information, please visit
trendlighting.com.au/warranty

Important Safety Information

Please read these installation instructions carefully before installing this luminaire.

- This product must be installed by a licensed electrician.
- Isolate the mains power supply prior to installation.
- Always ensure the mains power is OFF and that the fitting has been given time to cool before performing any maintenance or adjustment.
- Only reconnect mains power after installation is completed.
- Do not install luminaire near any heat sources.
- No part of the luminaire should be altered or modified.
- This product is not user serviceable.
- **Do not cover the luminaire with any heat insulating materials.**

Approvals

The RCM marking of this product applies to AS/NZS CISPR15:2011 “Limits and methods of measurement of radio disturbance characteristics of electrical lighting and similar equipment.” This product is designed to conform to AS/NZS60598.

Product Attributes

Product Code	Mounting Kits	Dimensions
ZPL404-UW-W-ND*	Standard T-Bar	1195 (L) x 295 (W) x 12 (H) mm
ZPL404-UW-W-SP-ND*	Suspension Kit (SP)	1195 (L) x 295 (W) x 12 (H) mm
ZPL404-UW-W-PR-ND*	Plaster Recessing Kit (PR)	1230 (L) x 330 (W) x 40 (H) mm
ZPL404-UW-W-SM-ND*	Surface Mounting Kit (SM)	1200 (L) x 300 (W) x 55 (H) mm

* **ZPL40** available in 3000K (3) and 4000K (4) colour temperature.

T-Bar Ceiling Installation (Standard)

1 Isolate the mains power supply prior to commencing installation.

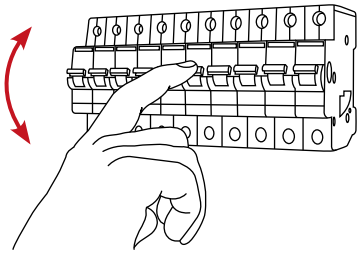

2 Remove the existing T-bar ceiling tile.

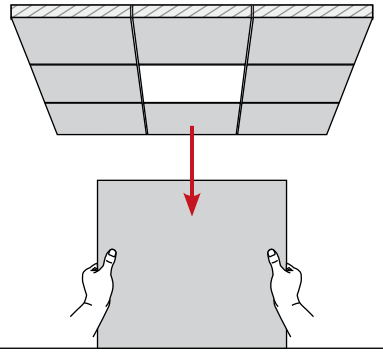

3 Connect the LED panel light to the driver. Connect the driver flex and plug to the socket.

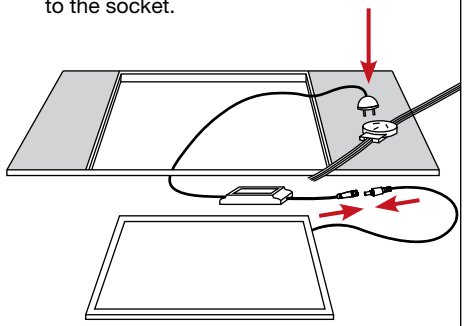

4 Insert the driver and LED panel light into the ceiling. Restore power once installation has been completed.

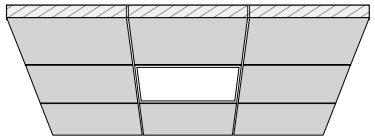

Suspended Installation (Requires Optional Suspension Kit)

1 Isolate the mains power supply prior to commencing installation.

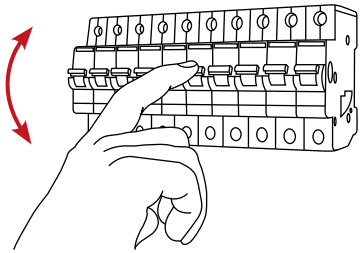

2 Mount the suspension bracket to the ceiling.

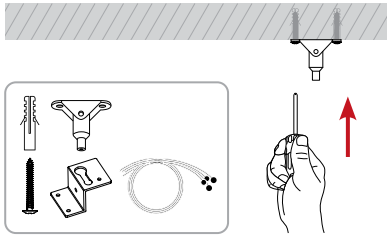

3 Screw the mounting bracket to the LED panel light and thread the suspension wire through the mounting bracket hole.

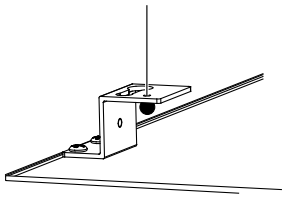

4 Thread suspension wire through the ceiling suspension bracket. Depress the top of the suspension bracket to release the clutch and to lengthen the wire.

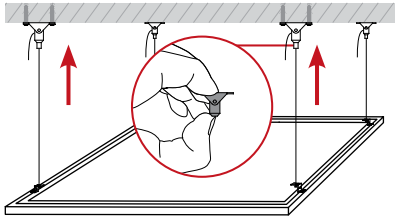

5 Connect the LED panel light to the driver. Connect the driver flex and plug the socket.

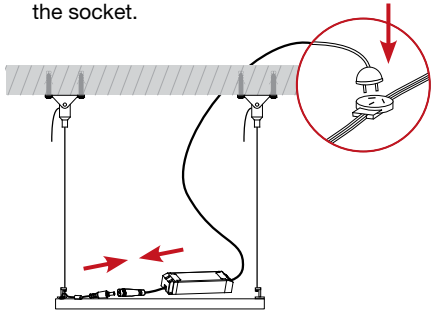

6 Restore power once installation has been completed.

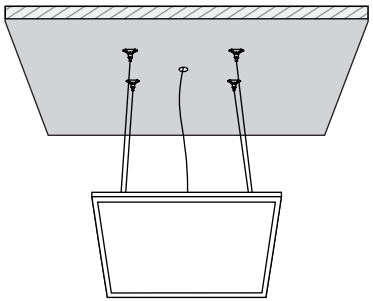

Recessed Installation (Requires Optional Plaster Recessing Kit)

1 Isolate the mains power supply prior to commencing installation.

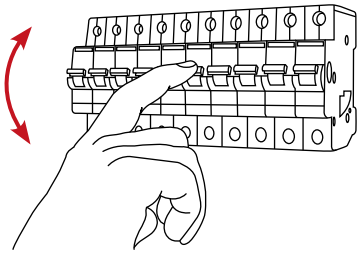

2 Mark at the correct location. Cut a hole in the ceiling in accordance with cutout size.

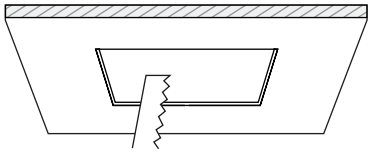

ZPL40 ceiling cutout:
1210 x 310 mm

3 Attach two brackets to one side of the recessed frame.

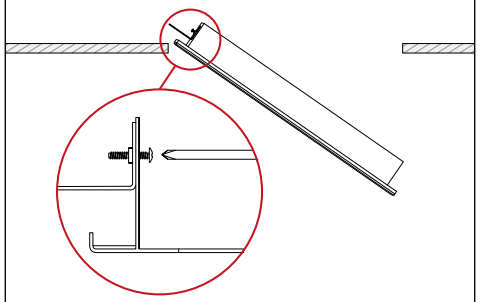

4 Insert the recessed frame into ceiling cutout and attach the remaining two brackets to the other side of the frame.

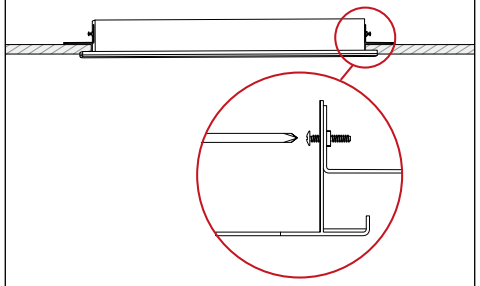

5 Connect the LED panel light to the driver. Connect the driver flex and plug to the socket.

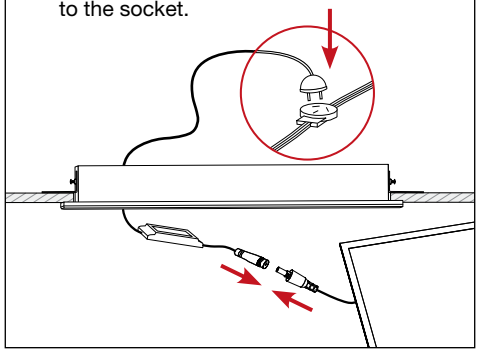
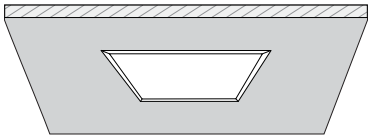
6 Insert the driver and LED panel light into the frame. Restore power once installation has been completed.